

# Connecting the RS-82/85 to a FACTORY KEYLESS ENTRY REMOTE using the #775 relay.

note\*\* this feature must be PROGRAMMED see Programming in Manual

